



MM720C4H-PM

**Microwave Oven**

U20MW / U20MM

**-Instruction Manual-**

IN ORDER TO OBTAIN THE GREATEST  
SATISFACTION FROM YOUR APPLIANCE, IT IS  
RECOMMENDED YOU READ THE  
INSTRUCTIONS CAREFULLY

# Introduction

**Dear Customer**

**Thank you for choosing this quality, Univa Microwave Oven.**

This User Manual contains important safety information and instructions on the operation and maintenance of your appliance.

Please take the time to read this User Manual before using your appliance and keep this book for future reference.

*ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE*

**IMPORTANT!**

*Keep this Instruction Manual safe for future reference*

## CONTENTS

➤ SAFETY WARNINGS.....	3
➤ SPECIFICATIONS.....	
➤ INSTALLATION.....	
➤ OPERATION.....	
➤ CLEANING & MAINTENANCE.....	
➤ TROUBLE SHOOTING.....	
➤ WARRANTY.....	

# SAFETY AND WARNINGS

To reduce the risk of fire, electric shock, injury, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including the following:

1. Precautions to avoid possible exposure to excessive microwave energy

Operating this oven with the door open can result in harmful exposure to microwave energy. Do not break or tamper with the safety interlocks.

Do not place any object between the oven front face and the door or allow soil or cleaning residue to accumulate on sealing surfaces.

**WARNING:** Do not operate the oven if the door or door seals are damaged. Repairs must be carried out by qualified service personnel.

2. This appliance can be operated by anyone older than 8 years of age, except persons with reduced physical, mental capabilities, or lack of experience and knowledge who may operate this appliance under supervision and/or have been given instructions concerning the safe operation of this appliance and the potential hazards that may arise from improper use.  
Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years of age and under adult supervision. Children younger than 8 years of age must be kept away unless continuously supervised.
3. Keep the appliance and its cord out of reach of children younger than 8 years of age.
4. Damaged cords are hazardous and must be replaced by the manufacturer, its service agent, or similarly qualified service personnel before the appliance can be used.
5. **WARNING:** The appliance must be switched off before replacing the lamp to avoid the possibility of electric shock.
6. **WARNING:** Do not allow anyone other than qualified service personnel to carry out maintenance or repairs that involves the removal of a cover which gives protection against exposure to microwave energy.

7. **WARNING:** Do not heat liquids and food in sealed containers as it may explode.
8. Be cautious when heating food in plastic or paper containers, as it may ignite.
9. Only use utensils that are suitable for use in microwave ovens.
10. If smoke is emitted, switch off and unplug the appliance and keep the door closed to stifle any flames.
11. Microwave heating of beverages can result in delayed eruptive boiling - care must be taken when handling the container.
12. The contents of feeding bottles and baby food jars must be stirred or shaken, and the temperature checked before consumption to avoid burns.
13. Do not heat eggs in their shell and whole hard-boiled eggs in microwave ovens as it may explode, even after microwave heating has ended.
14. The oven should be cleaned regularly, and any food deposits should be removed.
15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and be hazardous.
16. Install and operate the appliance in a ventilated area to avoid overheating.
17. This appliance is for indoor use only.
18. This appliance is intended for household and similar use such as: staff kitchen areas in shops, offices and other working environments, hotels, motels and other residential type environments; bed and breakfast type environments.
19. The microwave oven is only intended for the heating of food and beverages. Do not use to dry or heat clothes, warming pads, slippers, sponges, damp cloths, etc as this may lead to the risk of injury, ignition, or fire.
20. Do not use metallic containers for food and beverages in the microwave.
21. Do not use a steam cleaner to clean the microwave.



# Specifications

<b>Model:</b>	<b>MM720C4H-PM</b>
<b>Rated Voltage:</b>	<b>230V~ 50Hz</b>
<b>Rated Input Power (Microwave):</b>	<b>1050W</b>
<b>Rated Output Power Microwave):</b>	<b>700 W</b>
<b>Oven Capacity:</b>	<b>20 L</b>
<b>Turntable Diameter:</b>	<b>255 mm</b>
<b>External Dimensions:</b>	<b>(W)440 x (D)355 x (H)259mm</b>
<b>Net Weight</b>	<b>11.1kg</b>

## Utensils

Certain non-metallic utensils are not safe to use in the microwave. If in doubt, do the test by following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of coldwater (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the utensil is warm, do not use it in the microwave
4. Do not exceed 1 minute cooking time

## Materials allowed for use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Pierce or make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced, or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

## Materials to avoid using in microwave oven


Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arching
Metal twist ties	May cause arcing and could cause a fire in the oven
Paper bags	May cause fire in the oven
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature
Wood	Wood will dry out when used in the microwave and may split / crack.

# Unpacking

Remove the oven and all packing materials from the carton and oven cavity.

The following accessories are included:


Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

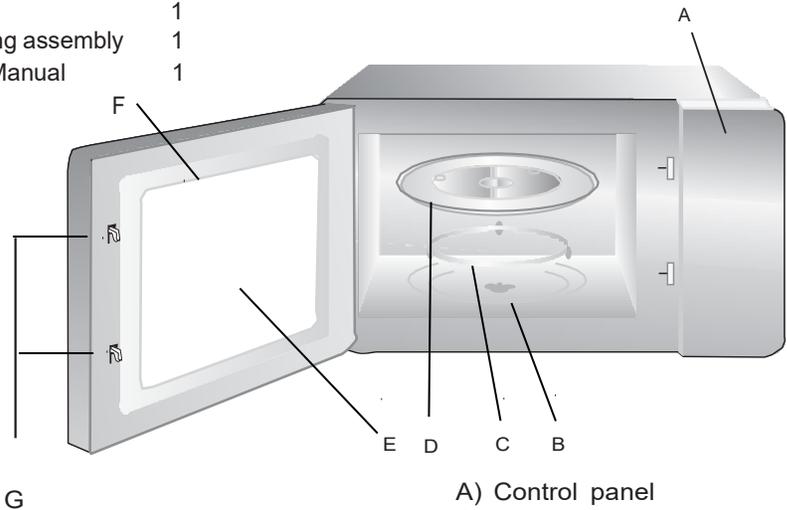

- A) Control panel
- B) Turntable shaft
- C) Turntable ring assembly
- D) Glass tray
- E) Glass window
- F) Door assembly
- G) Safety interlock system

## Turntable Installation

Hub (underside)

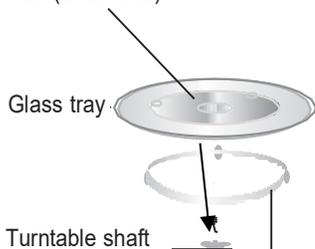

- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food containers must always be placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service centre.

Turntable ring assembly

# Installation

## DANGER

Electric Shock Hazard!

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## WARNING

Electric Shock Hazard!

Improper use of the grounding can result in electric shock.

Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded.

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a grounded cord and plug. The plug must be plugged into an outlet that is correctly installed and grounded.

Consult a qualified electrician or service centre if the grounding instructions are not completely understood, or if doubt exists whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

A short power-supply cord is provided to reduce the risks from becoming entangled in or tripping over a longer cord.

If an extension cord is used:

- The marked electrical rating of the extension cord should be the same as the electrical rating of the appliance.
- The extension cord must be a grounding-type 3-wire cord.
- The long cord should not drape over the countertop or tabletop where it poses a hazard to children or cause you to trip over it.


# Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

## Installation

1. Select a level surface that provides enough open space for the intake and/or outlet vents.

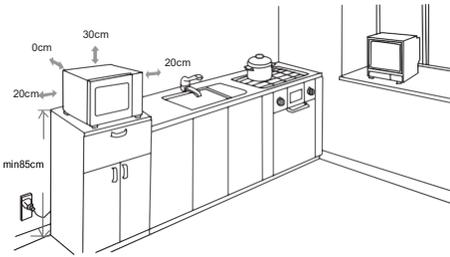

2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven above a range cooktop or other heat-producing appliance. If installed near, or above a heat source, the oven could be damaged and the warranty will be void.

The minimum installation height is 85cm.

The rear surface of the appliance must be placed against a wall.

Leave a minimum clearance of 30cm above the oven, a minimum clearance of 20cm is required between the oven and any adjacent walls.

Do not remove the legs from the bottom of the oven.

Blocking the intake and/or outlet openings can damage the oven.

Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to reception

**The accessible surface may be hot during operation.**










# OPERATION

## Control Panel and Features Operation Instructions

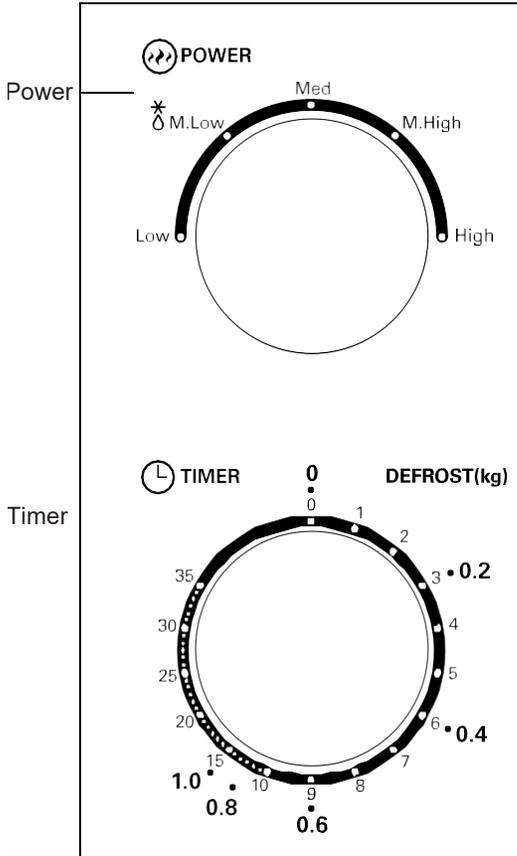

1. Set cooking power by turning the power knob to required level.
2. Set the cooking time by turning the timer knob to required time as per your food cooking guide.
3. The microwave oven will automatically start cooking after power level and time are set.
4. After the cooking time is up, the unit will make a "Dong" sound indicating that cooking is completed.
5. If the unit is not in use, always set time to "0".

Function/Power	Output	Application
Low	17% micro.	Soften ice cream
Med. Low (Defrost)	33% micro.	Soup, stew, soften butter or defrost
Med.	55% micro.	Stew, fish
Med. High	77% micro.	Rice, fish, chicken, ground meat
High	100% micro.	Reheat, milk, boil water, vegetables, beverage

Notice: When removing food from the oven, please ensure that the oven power is switched off by turning the timer switch to 0 (zero). Failure to do so, and operating the microwave oven without food in it, can result in overheating and damage to the magnetron.

# CLEANING & MAINTENANCE

1. Unplug the appliance from the power supply.
2. Clean the cavity of the oven after use with a slightly damp cloth.
3. Clean the accessories in the usual way in soapy water.
4. The door frame, seal and other parts must be cleaned carefully with a damp cloth when dirty.
5. Do not use harsh, abrasive cleaners or sharp metal scrapers to clean the oven door glass as it can scratch the surface, which may result in shattering of the glass.
6. Cleaning Tip:
7. For easier cleaning of the cavity walls place half a lemon in a bowl, add 300ml water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

## NOTE:

If the appliance is not maintained and kept clean, its surface could be degraded and affect the lifespan of the appliance and lead to injury or damage.

## Troubleshooting

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet	Test outlet with other electrical appliances.
Oven does not heat	(4) Door not closed well.	Close door well.

## DISPOSAL



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

## UNIVA WARRANTY

This guarantee is issued by Univa in respect of all products manufactured and sold by Univa. The liability to Univa is limited to the following conditions:

1. This guarantee operates in favour of the original purchaser of new appliances only and cannot be ceded, assigned or transferred. Univa shall have no liability in respect of second hand goods or to second or subsequent purchasers of any appliances.
2. This guarantee shall operate for a period of **Two Years** from the date of original purchase of the appliance which date shall be proved to the reasonable satisfaction of a Univa authorized service Agent or consultant.
3. The liability of Univa shall be limited to the repair or replacement by a Univa authorized service dealer in its sole discretion of the defective parts of the appliance at its sole cost. Univa shall not be liable for any loss or damage suffered by the customer or any other party or caused to the appliance arising from negligent use.
4. Should the defective appliance be situated further than 50 km from the nearest Univa service centre or authorized service agent, Univa shall be entitled to charge its customer a travelling rate for such distance in excess of 50 km.
5. The liability of Univa shall be limited in respect of defective parts or material or in respect of defective workmanship only. Univa authorized service agent shall have no liability if, in its opinion, the defect or fault was caused through faulty installation, accidental damage, incorrect usage, misuse or abuse, failure to follow the operating instructions, fire, flood, civil disturbances or any Act of God. The company shall not be responsible for damages caused by insect and/or animal infestation. Univa shall not be obliged to replace broken glass plates, light bulbs, fuses, vitreous enamelware, and any other items which Univa, in its sole discretion, determines that the life of such item depends on the amount of use and care taken in respect of such item.
6. The guarantee shall become void and cease to operate if the appliance is dismantled by or any repairs to the appliance are affected by any persons not duly authorized by Univa, or if any non-genuine Univa parts are used in the appliance, or if the serial number of the appliance is removed.
7. The product has been designed and manufactured for normal domestic use and the warranty will accordingly become void and cease to operate if the product is not used for domestic purposes.
8. If the customer is unable to prove the date of purchase of the appliance to the reasonable satisfaction of the representative of a Univa authorized service agent or if no fault or defects are found in the appliance, a Univa authorized service agent shall be entitled to charge for the work done and travelling expenses incurred.

## Details of Head Office

➤ Howick Mews, Waterfall Park, Bekker Road, Vorna Valley, Midrand, Gauteng, South Africa

➤ P.O. Box 1482, Halfway House, Gauteng, 1685

➤ Sales and Marketing Tel: +27 11 315 0015

Email: [sales@univa.co.za](mailto:sales@univa.co.za)

➤ Service and Spares: Tel: +27 11 315 0015

Email: [support@univa.co.za](mailto:support@univa.co.za)



[www.univa.co.za](http://www.univa.co.za)