



Since 1958

LPG Gas Freestanding Stove

Gas Hob with Gas Oven

Gas Hob with Electric Oven

- Instruction Manual -

IN ORDER TO OBTAIN THE GREATEST SATISFACTION FROM
YOUR COOKING APPLIANCE, IT IS RECOMMENDED
YOU READ THE INSTRUCTIONS CAREFULLY.

INTRODUCTION

Dear Customer,

Thank you for buying a quality Univa Gas Stove, specially designed to give many years of safe, convenient and trouble-free cooking. This instruction manual is for the 600mm full gas and gas/electric freestanding stoves and both models can only use L.P.G. (Liquid Petroleum Gas).

To ensure you get the best performance from your quality stove, please read this instruction manual carefully. Familiarize yourself with the appliance before connecting it to the gas cylinder.

ALL SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE

IMPORTANT!

Keep this Instruction Manual safe for future reference!

CONTENS

➤ SAFETY WARNINGS-----	2
➤ UNPACKING-----	3
➤ DISPOSAL OF THE APPLIANCE-----	3
➤ INSTALLATION -----	5
➤ CONNECTION TO THE POWER SUPPLY -----	6
➤ OPERATING INSTRUCTIONS-----	7
➤ CLEANING AND MAINTENANCE-----	10
➤ TROUBLESHOOTING-----	13
➤ UNIVA GUARANTEE-----	14

SAFETY AND WARNINGS

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless it is done under the supervision of a responsible adult.

Do not allow children to play or tamper with the appliance.

During use the appliance becomes hot. Care should be taken to avoid touching heated elements inside the oven or on the hob surface (plates).

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven and oven glass as it will scratch the surface, which may result in the inner/outer door glass shattering.

Do not use a steam cleaner to clean the appliance.

The appliance is not intended to be operated by means of external timer or separated remote-control system.

Danger of fire: Do not store flammable items inside or close to the appliance.

CAUTION: The cooking/baking process must be supervised continuously.

WARNING: Unattended cooking in the oven or on a hob with fat or oil can be dangerous and may result in a fire. The appliance must not be installed behind a decorative door to avoid overheating. The manufacturer shall not be liable for any damage caused by improper use, installation, or handling.



CAUTION! Never use the oven or hob as a heater



Always disconnect the appliance from the mains power supply before carrying out any maintenance or repairs.

Connection to a good earth wiring system is essential and mandatory. Alterations to the domestic wiring system must only be made by a qualified electrician. Failure to follow this advice may result in electrical shock or death.

UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage.

After unpacking, please dispose of all packaging in a way that will not cause damage to the environment.

All packaging materials used for the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

CAUTION!

Keep packaging materials such as polythene bags, polystyrene pieces, etc. out of reach of children.

DISPOSAL OF THE APPLIANCE



Old appliances should not simply be disposed with normal household waste but should be delivered to a collection and recycling center for electric and electronic equipment.

A symbol shown on the product, the instruction manual or the packaging shows if it is suitable for recycling.

Materials used inside the appliance are recyclable and are labelled with the relevant information. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.

Information on appropriate disposal centers for used devices can be provided by your local authority.

INSTALLATION



GAS-PRESSURE REGULATOR & HOSE – STAND ALONE INSTALLATION

The following is supplied with the cooker:

1. 2 x stainless steel hose clamps
2. 1 x 1,3 meters of rubber hose for domestic installation of LPG
3. 1 x LPG regulator

- This appliance requires an operating pressure of 2,8 KPa.
- Only the LPG regulator that is supplied with the unit which complies with the requirements of SANS 1237, must be installed.
- The flexible hose must always be checked that it is not perished and/or leaking.
- Ventilation in the room is vital for the effective performance and safety of Univa gas appliances.
- Test all connections for leaks by applying a soapy solution to all the joints.
- Should any leaks occur, bubbles will form around the joints. Refit or tighten the hose clamp and retest with a soapy solution.

IMPORTANT INFORMATION FOR THE INSTALLER

This appliance may only be installed by a qualified gas installer.

- The appliance must be installed in accordance with the requirements of SANS 10087-1 for use with LPG and any fire department regulations and/or local bylaws applicable to the area.
- The stove must be secured to prevent it from accidentally tilting forward if downward pressure is applied to the open oven door.
- Upon completion of the installation you are required to fully explain and demonstrate the operational details and safety practices of the appliance to the consumer.
- The gas stove is fueled appliance and as such it is important from a safety perspective to supply fresh air into the room in which the appliance is used. It is recommended that this is achieved by means of a permanent opening such as an air brick, or the customer should be advised that a window is kept open whilst the appliance is being used.

IMPORTANT INFORMATION FOR THE USER (WHEN INSTALLED BY A QUALIFIED GAS INSTALLER)

- All registered installers are issued with an identification card which includes their registration number.
- Ask for the identification card before allowing the installation work to commence and make a note of the Installer registration number.
- Upon completion of the installation, the installer is required to explain the operational details of the appliance as well as the safety instructions.
- You will be asked to sign acceptance of the installation and will be provided with a certificate of compliance (C.O.C.). You should only sign for acceptance of the installation when the installation is completed to your satisfaction.
- The air needed for burning is received from room air and the gases emitted are discharged directly in room. A well-ventilated room is essential for the safe operation of your product. If there is no door, window, or insufficient ventilation, then additional ventilation should be installed.
- **Note:** The sales invoice from the dealer is required should the need arise to make a guarantee claim on this product.

INSTALLING THE SPLASH-BACK:


- Remove Splash-back from oven cavity
- (C) Remove screws and washer from (A) cooking top
- (B) Place Splash-back in position, leaving the holes clear to see
- (D) Pre-mounted nut
- (C) Whilst holding the Splash-back in position, tighten (C) screws and washers until tight and (B) Splash-back is secured

A-COOKING TOP

B-SPLASH BACK


C-BIG WASHER

D-THREADED SCREW

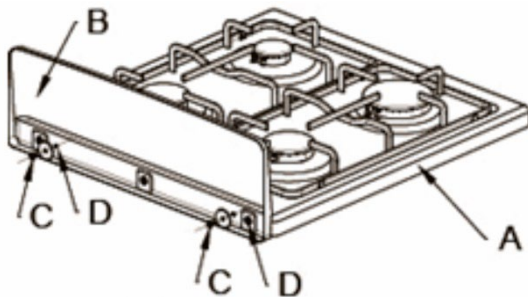

INSTALLING THE OVEN RACK:


Each Univa cooker is supplied with two chromed oven racks and one roasting pan

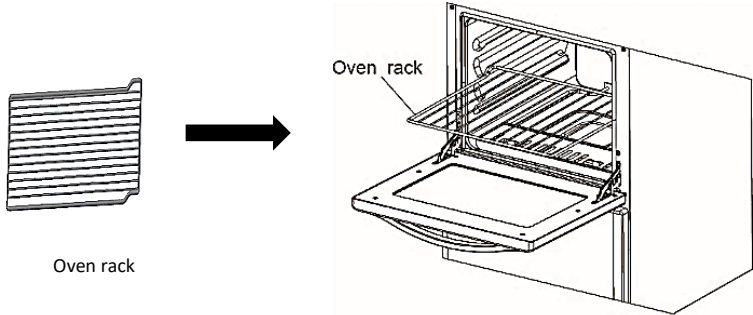

Oven rack installation for all stoves

INSTALLING A BATTERY:

The power for the automatic spark ignition is provided by a Type D 1,5V dry cell battery. The battery box is on the back of the stove. It has a hinged lid for easy access. It is recommended to replace the battery every 6 months.

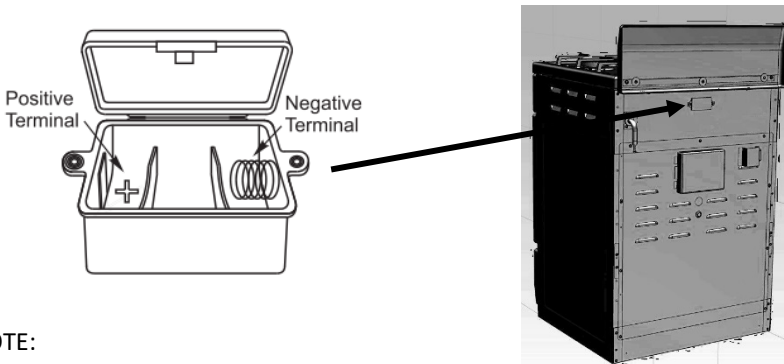

NOTE:

Product does not include a battery

CONNECTION TO THE POWER SUPPLY

This appliance has a 'Y' type supply cord connection and must be installed by a licensed electrician, who will ensure that the stove is correctly connected and **safely earthed**. After installation, inspect the unit to make sure all connections are secured and professionally installed and tightened.


If the supply cord is damaged for whatever reason, it must be replaced immediately.

The rated current is printed on the serial number label which is attached to the upper back panel of the stove.

IMPORTANT!


The appliance must not be connected through an earth leakage system, please refer to **S.A.N.S. 10142**.

The appliance must be connected to the mains through an isolator switch with a minimum clearance of 3mm between the contacts.

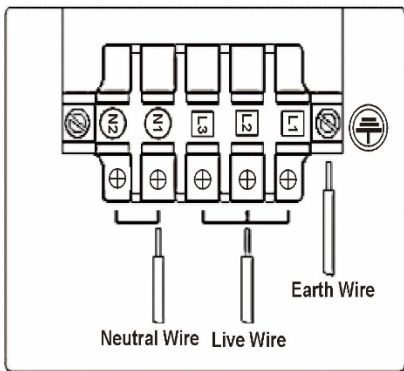


OPERATING INSTRUCTIONS

GAS HOB and GAS OVEN

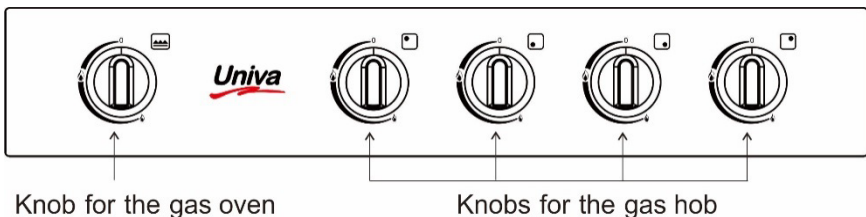


Gas Burners Controls:

 - 1. Left Rear
- 2. Left Front
- 3. Right Front
- 4. Right Rear
- 5. Gas Oven



GAS HOB and ELECTRIC OVEN

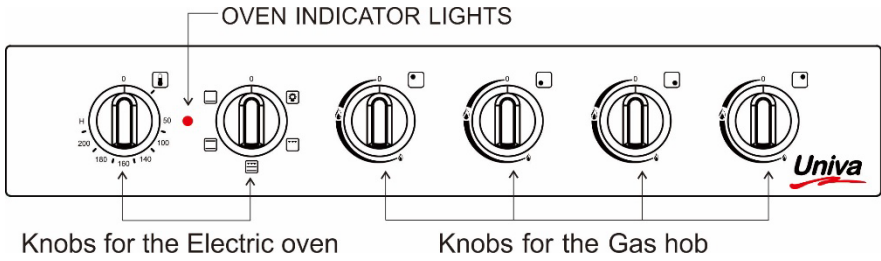

Electric Oven Controls:



Oven Light- stays on when oven is in use. (Optional)



Grill – Thermostatically controlled grilling.



Preheat – Reduces oven heat-up time. Remember to select “bake” when the selected temperature has been reached.



Bake – Top & bottom bake elements for conventional baking. The top bake element is a black-heat element and will never turn red as with the bottom bake element.




Bottom Bake – only bottom element works for moderate baking,




Thermostat – All functions of the oven are thermostatically controlled. "H" is the maximum temperature of 230°C

The oven is controlled by the temperature (A) and function (B) selection knobs.

A - Temperature

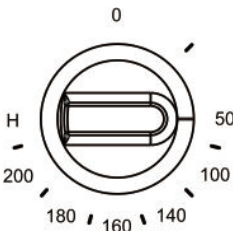

B - Function

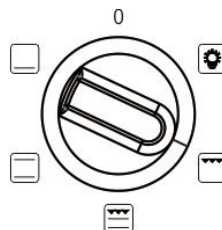

NOTE:

- ✓ Turn the temperature control knob to the required setting when using the oven for baking or grilling. Remember to select which elements you want to use on the selector switch, otherwise the oven will not work. The indicator light will go out when the oven has reached the required temperature and will continue to go “ON” & “OFF” as the oven is thermostatically controlled.
- ✓ Set all switches to ‘0’ position when not in use.

WARNING!



When the grill is in use, accessible parts can become hot - Keep children away from the oven.

USING GAS BURNERS:

1. To light the burners push in and turn the control knob of the burner you wish to light in an anti-clockwise direction to the mid position. This will generate the automatic ignition spark causing the burner to ignite.
2. Note that each burner is fitted with a flame failure sensor which will shut off the gas supply if the burner flame goes out. After lighting the burner hold the control knob in the pressed in position for 5-10 seconds to allow the flame failure sensor to function correctly, If the flame goes out when the knob is released, repeat the light procedure and hold the control knob in for a few more seconds. Repeat the above process to ignite the other burners as required.
3. To adjust the flame to the required level, turn the burner control knob further in an anti-clockwise direction to reduce the flame. If turned fully in this direction, the flame will continue to burn at the simmer position. Turning the control knob back to the mid position will give the maximum flame level. Turning the control knob in a clockwise direction from the mid position will again reduce the flame level and if the knob is turned fully in a clockwise direction to the off position it will shut down the burner.

WARNING!



Do not attempt to ignite the gas for more than 15 seconds. If the burner is not igniting within 15 seconds, turn off the knob and wait for 1 minute. Ventilate the room before re-attempting to ignite the burner/oven

USING GAS BURNERS:

When cooking always use the burner that suits the pot size. For the most effective use of the burners use the recommended pot sizes indicated below:

Normal burner: 200mm-240mm diameter / Big burner: 240mm-260mm diameter

This will ensure that you will achieve the best cooking efficiency. If the flame appears to extend up the sides of the pot, either place the pot on a larger burner or reduce the flame height by adjusting the required burner control knob.

CLEANING AND MAINTENANCE

Adequate cleaning and regular maintenance of the stove can have a significant influence on the continuing fault free operation of the appliance.



WARNING!


Before cleaning, the stove must be switched off and all knobs must be set to the "0" position.
Do not start cleaning until the oven has completely cooled.


CAUTION!

- Do not use cleaning products containing abrasive materials for the cleaning and maintenance of the glass front panel.
- Do not use any abrasives, steel wool, chloride, etc., to clean the enameled surfaces.
- Simply wipe with a damp cloth while the surface is still warm or use one of the leading brands of oven-enamel cleaners on the market.

CLEANING THE HOB BURNERS:

- Wash the enameled surfaces with lukewarm detergent water; do not use abrasive products which could damage these parts
- The flame caps and burner caps can be cleaned thoroughly by using hot water and detergent
- For stubborn dirt, use ordinary non-abrasive detergents
- DO NOT use scouring pads, steel wool or acids for cleaning as it will damage the enamel
- After cleaning, ensure the components are refitted correctly
- Make sure the clips fit inside the groove

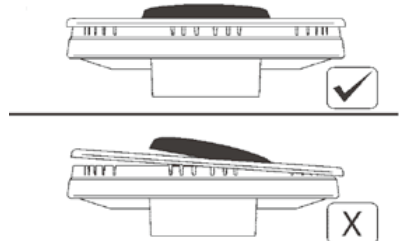

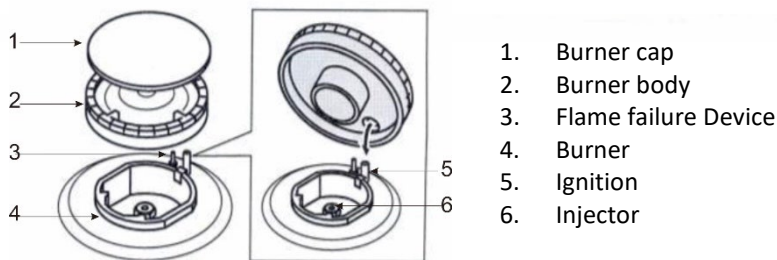

Definition of Flame Failure Device (FFD):

It's a device designed to stop flammable gas going to the burner of a gas appliance if the flame is extinguished. This is to prevent a dangerous build-up of gas within the appliance, its chimney or the room.

IMPORTANT!

Make sure that all control knobs are in the OFF position when the cooker is not in use

IF YOU SMELL GAS:

- Close off gas supply at the cylinder
- Extinguish all naked flames
- Do not operate any electrical appliances
- Ventilate the area
- Check for leaks as detailed in this manual
- Do not tamper or modify the appliance or regulator
- Should the flame not appear to be burning correctly, close off gas supply at the cylinder and seek advice from the dealer or service center
- Ventilation in the room is vital for the effective performance and safety of Univa gas appliances



DO NOT TEST CONNECTIONS FOR LEAKS WITH A NAKED FLAME!


HOW TO REMOVE THE OVEN DOOR

To obtain easier access to the oven cavity for cleaning, it is possible to remove the door.



After the door is fitted to the oven, the safety catch should be carefully lowered down again. If the safety catch is not set, it may cause damage to the hinge when closing the door.

1. Open the oven door fully.
2. Lift up and turn the small hooks located on the hinges (right and left).
3. Grip the door on the two external sides, shut it slowly but not completely.
4. Pull the door up towards you, lifting it out of the oven frame.
5. To replace the door, use the reverse procedure.

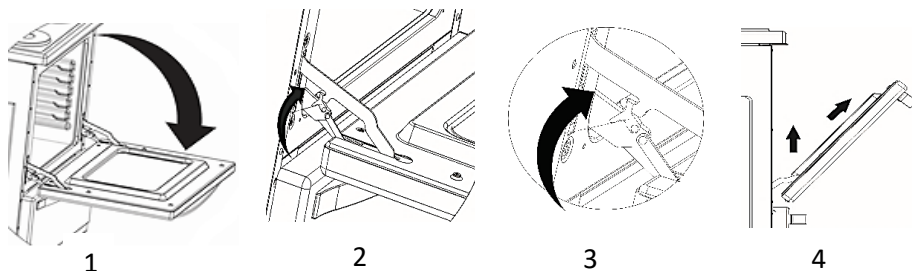

HOW TO REPLACE THE OVEN LAMP (ELECTRIC OVEN ONLY)



WARNING!

Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

LAMP SPECIFICATION

-Voltage: AC 220-240V/50Hz -Wattage: 25W -Type: E 14
Resistant to high temperatures (300°C)
Replacement lamps are available from service technician.



Changing the bulb:

Unscrew the protective cover. We recommend that you wash and dry the glass cover at this point. Carefully remove the old bulb and insert the new bulb suitable for high temperatures (300°C) having the following specifications: AC 220-240V/50Hz, 25W, E14 fitting. Refit the protective cover and reconnect the oven to the mains power.


IMPORTANT

Never use screwdrivers or other utensils to remove the light cover. This could damage the enamel of the oven or the lamp holder. Remove only by hand.

Never replace the bulb with bare hands as contamination from your fingers can cause premature failure. Always use a clean cloth or gloves.

NOTE:

The bulb replacement is not covered by the guarantee.

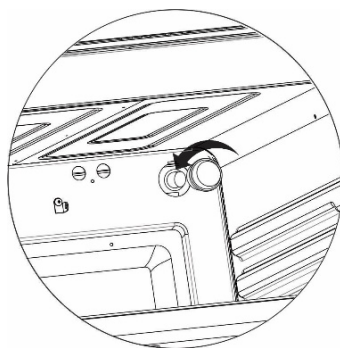

TROUBLESHOOTING

If you cannot find an answer to the problem in the chart below, or if the problem cannot be fixed, technical help is needed. Contact Customer Care!

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
The oven or hob is not heating and the indicator light is off	No power supply to the stove	Check that the stove is connected to the power supply and the power is turned on. If it is and the oven still doesn't work,

		there may be a Power failure in your home or area.
The oven lamp does not come on, but the oven is heating.	The lamp has blown	Replace the lamp. See instructions in 'CLEANING & MAINTENANCE'.
Uneven baking results.	Oven not properly preheated.	Put the food in the oven only when the temperature indicator light has gone off.
Droplets of water in or around oven (e.g. on control panel, oven door, rubber seal framing the cavity).	Food has high moisture content or local climate (temperature, humidity) is contributing to condensation.	Some condensation is normal. You can wipe the droplets off with a soft cloth.
The oven door is noisy or has a poor seal	The oven door is not installed properly	Replace the oven door. See instructions in 'CLEANING & MAINTENANCE'.

Ensure enough ventilation is provided for oven and hob.

(Kindly contact your nearest dealer for further information)

UNIVA GUARANTEE

This warranty is issued by Univa in respect of all products manufactured and sold by Univa. The liability to Univa is limited to the following conditions:

1. This guarantee operates in favour of the original purchaser of new appliances only and cannot be ceded, assigned or transferred. Univa shall have no liability in respect of second-hand goods or to second or subsequent purchasers of any appliances.
2. This guarantee shall operate for a period of **Two Years** from the date of original purchase of the appliance which date shall be proved to the reasonable satisfaction of a Univa authorized service Agent or consultant.

3. The liability of Univa shall be limited to the repair or replacement by a Univa authorized service dealer in its sole discretion of the defective parts of the appliance at its sole cost. Univa shall not be liable for any loss or damage suffered by the customer or any other party or caused to the appliance arising from negligent use.
4. Should the defective appliance be situated further than 50 km from the nearest Univa service center or authorized service agent, Univa shall be entitled to charge its customer a travelling rate for such distance in excess of 50km.
5. The liability of Univa shall be limited in respect of defective parts or material or in respect of defective workmanship only. Univa authorized service agent shall have no liability if, in its opinion, the defect or fault was caused through faulty installation, accidental damage, incorrect usage, misuse or abuse, failure to follow the operating instructions, fire, flood, civil disturbances or any Act of God. The company shall not be responsible for damages caused by insect and/or animal infestation. Univa shall not be obliged to replace rusted or corroded plates, light bulbs, fuses, vitreous enamelware, burners, burner parts, rings and any other items which Univa, in its sole discretion, determines that the life of such item depends on the amount of use and care taken in respect of such item.
6. The guarantee shall become void and cease to operate if the appliance is dismantled by or any repairs to the appliance are affected by any persons not duly authorized by Univa, or if any non-genuine Univa parts are used in the appliance, or if the serial number of the appliance is removed.
7. The product has been designed and manufactured for normal domestic use and the guarantee will accordingly become void and cease to operate if the product is not used for domestic purposes.
8. If the customer is unable to prove the date of purchase of the appliance to the reasonable satisfaction of the representative of a Univa authorized service agent or if no fault or defects are found in the appliance, a Univa authorized service agent shall be entitled to charge for the work done and travelling expenses incurred.
9. If an approved, tested and verified surge protection device (SPD) against voltage surges is not utilized on any Univa branded product, all guarantees are null and void. The correct use of such a device should be proven to claim against the guarantee.

Univa (Pty) Ltd. adheres to the Consumer Protection Act, 2008 as per the Government Gazette for the Republic of South Africa, Volume 526, Dated 29 April 2009, Number 32186

ALL SPECIFICATIONS ARE SUBJECTED TO CHANGE WITHOUT PRIOR NOTICE

Details of Head Office

- Howick Mews, Waterfall Park, Bekker Road, Vorna Valley, Midrand, Gauteng, South Africa
- P.O. Box 1482, Halfway House, Gauteng, 1685
- Sales & Marketing Tel: +27 11 315 0015 Email: sales@univa.co.za
- Customer Care: Tel: +27 11 315 0015 Email: support@univa.co.za



www.univa.co.za